

	23B/22B/31B/42B/43B	23	69/69H/69C/69HC	65/65C/68/68C/67	66	92	93	95	96	97	98	63	64
	BP	W	W	W	/W	W	W	W	W	W	W	W	W
01/02/12B HopeRF_RF-EVB_manual_V1.2	√	√	√	√	√	√	√	√	√	√	√	√	√
1	√	√	√	√	√	√	√	√	√	√	√	√	√
RFD_PIC16_LCD V1.1 Hardware resource	√	√	√	√	√	√	√	√	√	√	√	√	√
RFM6X Demo Kit User Manual			√			√		√					√
RFM65W/RFM69W/RFM69HW Register Settings			√	√	√	√	√	√					
RFM63W Register Settings													√
RFM64W Register Settings													√
RFM69W LCD-Listen mode code			√	√	√	√	√	√					
RFDK_RFM69W_V2.0 Demo Code			√		√								
RFDK_RFM69HW_V2.0 Demo Code				√		√							
RFDK_RFM65W_V2.0 Demo Code										√	√		
RFDK_RFM63W_V2.0 Demo Code													√
RFDK_RFM64W_V2.0 Demo Code													√
RFDK_RFM92W_V1.0 Demo Code											√	√	
RFDK_RFM96W_V1.1 Demo Code												√	√

Product design tool list

Attention: The above information applies to the chip